



Original	Replacement	Original	Replacement
 TV Power	 Shift + Power	 Mute	 Mute / Dimmer
 TV Input	 Shift + AV / Input / RDS	 CH+ / PG+	 CH+ / Page+
 Power	 Power	 Vol-	 Vol-
 Guide	 Guide / EPG / -/--	 CH- / PG-	 CH- / Page-
 Menu	 Menu / Home	 R	 TV/Radio /
 Text	 Text / Goto	 R	 Shift + Green / APP /
 Aspect	 Picture / Format	 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Subtitle	 Subtitle / EQ	 << / Tune-	 << / Tune-
 Back	 Back / Return	 Play	 Play / Slow
 Up	 Up	 >> / Tune+	 >> / Tune+
 Info	 Info / Angle	 I< Replay	 I<< / Preset-
 Left	 Left	 >I Skip	 >>I / Preset+
 OK	 OK	 Source	 AV / Input / RDS
 Right	 Right	 1	 1
 Down	 Down	 2	 2
 Vol+	 Vol+	 3	 3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Clear		Exit / Cancel / Clear				
	0		0				
	Enter		Fav / Marker / PC				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

