


 

 











 












 


 


 

 
 
 
 
 
 
 


 
 




 
 
 
 

 






 
 






Original	Replacement	Original	Replacement
 Standby	 Power	 EPG / D.Disp	 Guide
 Eject	 Eject	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 LCD Menu	 Menu
 8	 8	 Picture Format / DVD Setup	 Format
 9	 9	 Picture Format / DVD Setup	 Options
 0	 0	 Source	 AV
 -/-- +10	 Shift + Guide	 PMode	 Shift + Format
 Recall	 Back	 SMode	 Shift + Dual
 V+	 Vol +	 Mute	 Mute
 V-	 Vol -	 Play / Pause	 Play
 Title / Lang	 Dual	 Play / Pause	 Pause

Original	Replacement	Original	Replacement
 Standby	 Power	 EPG / D.Disp	 Guide
 Eject	 Eject	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 LCD Menu	 Menu
 8	 8	 Picture Format / DVD Setup	 Format
 9	 9	 Picture Format / DVD Setup	 Options
 0	 0	 Source	 AV
 -/-- +10	 Shift + Guide	 PMode	 Shift + Format
 Recall	 Back	 SMode	 Shift + Dual
 V+	 Vol +	 Mute	 Mute
 V-	 Vol -	 Play / Pause	 Play
 Title / Lang	 Dual	 Play / Pause	 Pause





Original	Replacement	Original	Replacement
Exit / Stop	Exit	Red / Program	Red
Exit / Stop	Stop	Red / Program	Shift + 1
Sleep	Sleep	Green / Menu	Green
Nicam Audio	List	Green / Menu	D. Menu
Text / <<	Text	Yellow / Repeat	Yellow
Text / <<	<<	Yellow / Repeat	Shift + Text
FAV Hold / >>	Pre Ch	Blue / AB	Blue
FAV Hold / >>	>>		
FAV- / Goto	Media		
Fav+ / Angle	Smart		
Index / I<<	Info		
Index / I<<	I<<		
Size / >>I	3D		
Size / >>I	>>I		
Reveal / Zoom	TV/R		
Reveal / Zoom	Shift + Eject		
Subpage /	Subt		

