


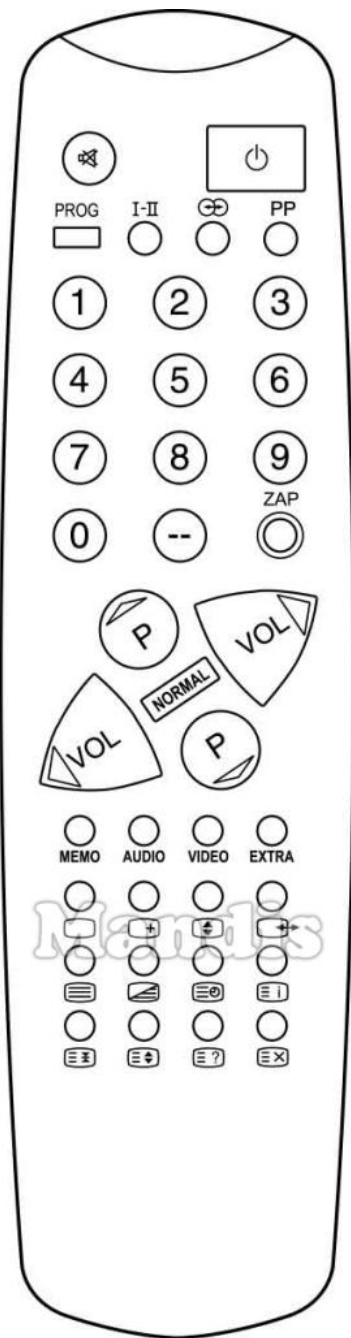











Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O↔O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[ ]		Display / Media
	--		Guide / EPG / --		[ + ]		Stop / Hold





	Original	Replacement	
	[ ◆ ]	OPT-TOOLS <b>SETUP</b>	Setup / OPT /
	[ ]↔	TOP MENU <b>D.MENU</b>	D.Menu / Top
	[ ≡ ]	GOTO <b>TEXT</b>	Text / Goto
	[ /≡ ]	SHIFT + GOTO <b>TEXT</b>	Shift + Text /
	[ ≡⊖ ]	EQ <b>SUBTITLE</b>	Subtitle / EQ
	[ ≡ i ]	ANGLE <b>INFO</b>	Info / Angle
	[ ≡□ ]	STEP-FREEZE <b>  </b>	Pause / Step / Freeze
	[ ≡◆ ]	SIZE <b>ZOOM</b>	Zoom / Size
	[ ≡? ]	RDS <b>AV INPUT</b>	AV / Input / RDS
	[ ≡X ]	CLEAR <b>EXIT</b>	Exit / Cancel / Clear

Original	Replacement

