








 


 
 



 


 
 

 

 





 

 
 



 

 
 
 
 
 

 

 

 
 
 
 
 
 
 


 


 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 AV Mode	 Shift + AV	 P+	 Ch +
 Radio	 TV/R	 P-	 Ch -
 TruSurround	 List	 Vol+	 Vol +
 OPC	 Media	 Vol-	 Vol -
 DTV	 Smart	 Mute	 Mute
 1	 1	 [<>]	 Format
 2	 2	 ▼/O)/I/II/I+II	 Dual
 3	 3	 [i+]	 Info
 4	 4	 Sleep	 Sleep
 5	 5	 EPG	 Guide
 6	 6	 ESG	 Options
 7	 7	 DTV Menu	 D. Menu
 8	 8	 [≡]	 Text
 9	 9	 Menu	 Menu
 0	 0	 End	 Exit
 Recall	 Pre Ch	 Return	 Back





Original	Replacement	Original	Replacement
Up	Up		
Down	Down		
Right	Right		
Left	Left		
OK	Ok		
[≡?]	3D		
[≡+]	ZOOM		
[...]	AD SUBT		
[≡o]	+ Shift + 3D		
Red	A		
Green	B		
Yellow	C		
Blue	D		

