



 




 



 



 






 
 



 






 



 



 



 

 

 







 

 

 






Original	Replacement	Original	Replacement
 Standby	 Power	 Menu	 Menu
 Mute	 Mute	 TV / Radio	 TV/R
 1	 1	 Exit	 Exit
 2	 2	 Up / CH+	 Ch +
 3	 3	 Up / CH+	 Up
 4	 4	 Down / CH-	 Ch -
 5	 5	 Down / CH-	 Down
 6	 6	 Right / Vol+	 Vol +
 7	 7	 Right / Vol+	 Right
 8	 8	 Left / Vol-	 Vol -
 9	 9	 Left / Vol-	 Left
 0	 0	 OK	 Ok
 Info 2	 Shift + Info	 Page Up	 >>
 FAV	 Pre Ch	 Page Down	 <<
 Audio	 Dual	 Red	 Red
 Sub-T	 Subt	 Green	 Green
 Text	 Text	 Yellow	 Yellow





Original		Replacement		Original		Replacement	
	Blue		Blue				
	Play / Pause		Play				
	Play / Pause		Pause				
	Return		Back				
	Info		Info				

