



 








 













 








 




 


	Original	Replacement		Replacement
	Tv/Video		TV/Radio /	
	Power		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	-/--		Guide / EPG / -/--	
	10/0		0	
	Enter		OK	
	Vol+		Vol+	
	Vol-		Vol-	
	CH-		CH- / Page-	

	Original	Replacement	
	CH+		CH+ / Page+








 

Original	Replacement
 Sleep	 Sleep / Timer
 Timer Menu	 Shift + Sleep / Timer
 Theatre Sync	 Red / Netflix / Search
 Power	 Power
 Display	 Display / Media
 Time/Text	 Text / Goto
 Dimmer	 Mute / Dimmer
 Function+	 CH+ / Page+
 Key Control b	 Smart / List
 Key Control #	 Shift + Smart / List
 Score	 Setup / OPT /
 Function-	 CH- / Page-
 Karaoke Mode	 Sound / Title
 Karaoke Pon	 Yellow / YouTube / Repeat
 Repeat/FM	 Green / APP / Repeat
 Picture Navi	 Picture / Format
 1	 1

Original	Replacement
 2	 2
 3	 3
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle
 Clear	 Exit / Cancel / Clear
 0	 0
 Folder-	 Shift + CH- /
 Folder+	 Shift + CH+ /
 DVD Top Menu	 D.Menu / Top
 DVD/USB/Tuner	 Menu / Home





Original	Replacement
 EQ	 Shift + Subtitle / EQ
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Volume+	 Vol+
 Down	 Down
 Display/[*]	 Shift + Display / Media
 Volume-	 Vol-
 Return	 Back / Return
 I<</Preset-	 I<< / Preset-
 ←/Replay/<I Step	 Shift + Left
 →/Advance/Step II>	 Shift + Right
 >>I/Preset+	 >>I / Preset+
 <</Tuning -/<I	 << / Tune-
 Play	 Play / Slow
 >>/Tuning	 >> / Tune+

Original	Replacement
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold



+/Slow I>