 























 



 

























 
 















Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Fav / Marker / PC
 Display	 Display / Media	 Vol+	 Vol+
 Guide	 Guide / EPG / -/--	 CH+	 CH+ / Page+
 Source	 AV / Input / RDS	 Vol-	 Vol-
 Wide	 Picture / Format	 CH-	 CH- / Page-
 MPX	 Setup / OPT /	 1	 1
 Menu	 Menu / Home	 2	 2
 Up	 Up	 3	 3
 Back / Cancel	 Back / Return	 4	 4
 Back / Cancel	 Exit / Cancel / Clear	 5	 5
 Left / <<	 Left	 6	 6
 Left / <<	 << / Tune-	 7	 7
 OK	 OK	 8	 8
 Right / >>	 Right	 9	 9
 Right / >>	 >> / Tune+	 Teletext	 Text / Goto
 Mute	 Mute / Dimmer	 0	 0
 Down	 Down	 Subtitle	 Subtitle / EQ





Original		Replacement		Original	Replacement
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Index / I<<		I<< / Preset-		
	Index / I<<		Info / Angle		
	Size / Rec/Stop		Rec / Rec Mode		
	Size / Rec/Stop		Stop / Hold		
	Size / Rec/Stop		Zoom / Size		
	Hold / Play/Pause	 + 	Shift + Stop /		
	Hold / Play/Pause		Play / Slow		
	Hold / Play/Pause		Pause / Step / Freeze		
	Reveal / >>I		>>I / Preset+		
	Reveal / >>I		Smart / List		

