



 


 



 
 
 
 

 

 




 
 

 

 

 



 
 


 
 

 

 



 

 

 

 






 


 


 



 
 

 

 



Original	Replacement	Original	Replacement
 Power On	 Power	 Vol-	 Vol -
 Power Off	 Shift + Power	 Mute	 Mute
 1	 1	 FRQ Direct	 Play
 2	 2	 Tune	 I<<
 3	 3	 Preset	 >>I
 4	 4	 FM Mono	 Pause
 5	 5	 Band	 Stop
 6	 6	 Center	 Yellow
 7	 7	 Swoofers	 Red
 8	 8	 Surround	 Green
 9	 9	 Menu	 Menu
 0	 0	 Up	 Up
 +10	 Guide	 Down	 Down
 Memory	 Pre Ch	 +/Forward	 Right
 CH+	 Ch +	 -/Back	 Left
 CH-	 Ch -	 Enter	 Ok
 Vol+	 Vol +	 CD	 Shift + 1





 
 
 

 



 

 
 


 





 
 
 


 
 






 



 

 





 

 



 


 

 
 
 

 



 



Original	Replacement
 Tun	 Shift + 2
 Tape	 Shift + 3
 EXT	 Shift + 4
 V1/DVD	 Shift + 5
 V2	 Shift + 6
 V3	 Shift + 7
 V4	 Shift + 8
 V5	 Shift + 9
 EQ	 Smart
 DYN	 Media
 Rec	 Rec
 Zone	 Shift + Smart
 Sur+	 Shift + Media
 2 CH	 List
 PL C	 Options
 PL M	 3D
 5 CH	 Dual

Original	Replacement
 7 CH	 Subt
 Display	 Info
 Tape 2	 Exit
 Phono	 Back
 Tone	 Text
 D-SLT	 D. Menu
 Scan	 Shift + Play
 PTY	 <<
 P-Tun	 >>
 TP	 Shift + Pause
 TA	 Shift + Stop
 Power	 Blue







 
 



 

 

 

 

 
 
 
 

 

 

 

 
 
 




 




Original	Replacement	Original	Replacement
 Power On	 Power	 Play	 Play
 Power Off	 Shift + Power	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 Pause	 Pause
 3	 3	 Stop	 Stop
 4	 4	 Menu	 Menu
 5	 5	 Up	 Up
 6	 6	 OSD	 Back
 7	 7	 Down	 Down
 8	 8	 -/Back	 Left
 9	 9	 -/Back	 <<
 0	 0	 +/Forward	 Right
 +10	 Guide	 +/Forward	 >>
 Clear (X)	 Exit	 Enter	 Ok
 Vol+	 Vol +	 Search-	 Ch -
 Vol-	 Vol -	 Search+	 Ch +
 Mute	 Mute	 Random (DYN)	 TV/R





 

 
 





 

 

 

 



 


 
 

 
 
 

 



 



 
 

 


 

 


 

 

 
 


 
 
 

 
 
 
 
 

 
 

 

 


Original		Replacement	
	PAL (Rec)		Format
	HD Mode		3D
	DIM (SUR+)		AV
	Prog (2CH)		Sleep
	Screen (PL C)		Smart
	Title (PL M)		Media
	Prog-Scan		Options
	Open (7CH)		Eject
	Display		Info
	Audio		Dual
	Angle		List
	Subtitle		Subt
	Zoom		Shift + Eject
	Resume		Shift + Right
	Repeat		Text
	A-B		D. Menu
	Goto		Shift + Left

Original		Replacement	
	Slow		Shift + Play
	Power		Blue

 

 

 

 
 

 

 
 





Original	Replacement	Original	Replacement
 Power On	 Power	 I<<	 I<<
 Power Off	 +  Shift + Power	 >>I	 >>I
 1	 1	 Pause	 Pause
 2	 2	 Stop	 Stop
 3	 3	 Open (ENT)	 Ok
 4	 4	 Open (ENT)	 Eject
 5	 5	 Search-	 Ch -
 6	 6	 Search+	 Ch +
 7	 7	 Disc 1	 +  Shift + 1
 8	 8	 Disc 2	 +  Shift + 2
 9	 9	 Disc 3	 +  Shift + 3
 0	 0	 Disc 4	 +  Shift + 4
 TEN (+10)	 GUIDE Guide	 Disc 5	 +  Shift + 5
 Vol+	 Vol +	 Program (2CH)	 Sleep
 Vol-	 Vol -	 Random (PL C)	 TV/R
 Mute	 Mute	 Repeat (PL M)	 Text
 Play	 Play	 Disc+ (7CH)	 >>





Original	Replacement	Original	Replacement
 Display (DISP)	 Info		
 Scan	 Smart		
 Time (PTY)	 Pre Ch		
 A-B (P-Tun)	 D. Menu		
 Review (TP)	 Media		
 Clear (TA)	 Exit		
 Power	 Blue		

