
 
 




 





 




 
 

 

 






 



 

 

 




 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Out	 Mute	T.Set/Clock	 Options
Slow Down	 Text	Menu Right	 Right
F.Adv	 Eject	Exit	 Exit
Stop	 Stop	Menu Down	 Down
Pause	 Pause	Next	 >>
Slow/Dpss-	 Vol -	Audio	 Dual
Auto/Track	 Media	Prev.	  <<
Mon/TV	 TV/R	1	 1
Sp/Lp/Speed	 List	2	 2
Video/Go-To	 D. Menu	3	 3
Slow/Dpss+	 Vol +	4	 4
VCR/TV	 Smart	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9



Original	Replacement	Original	Replacement
-/--	 Guide		
0	 0		
Progr/C/CH	 Pre Ch		
Record	 Rec		
Rewind	 <<		
Play	 Play		
Chan-	 Ch -		
Chan+	 Ch +		
Input Source	 AV		
F.Forward	 >>		
Timer/Sleep	 Sleep		

