




 
 
 



 


 







 

 








 

 




 
 
 

 
 

 
 
 






Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide
	Mute		Mute		Menu		Menu
	Red		Red		Info		Info
	Green		Green		Up		Up
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	<<		<<		Right		Right
	>>		>>		Down		Down
	I<<		I<<		FAV		Pre Ch
	>>I		>>I		Exit		Exit
	Play		Play		Vol+		Vol +
	Pause		Pause		Vol-		Vol -
	Stop		Stop		Rec		Rec
	Media		Media		USB		Smart
	Subtitle		Subt		USB		AV
	TTX		Text		CH+		Ch +
	Audio		Dual		CH-		Ch -





Original		Replacement		Original		Replacement	
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Back		Back				
	TV/Radio		TV/R				

