



Original	Replacement	Original	Replacement
	Power		Power
	Eject		Shift + Eject
	Open/Close		Eject
	Display Call		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Channel+		Ch +
	Channel-		Ch -
	Showview/Progra		Guide
	Timer Rec		AV
	Rec OTR		Rec
	Marker/Tape		Options
	Jump/Zero Return		Pre Ch
	Clock/Counter		Yellow
	Counter Reset		Green
	Tv/VCR		TV/R
	VCR		Smart
	DVD		Media
	Setup Menu		Menu
	DVD Menu		D. Menu
	Up		Up
	Down		Down
	Right/TRK+		Right
	Left/TRK-		Left
	Enter/Select		Ok
	Title		Red





Original	Replacement	Original	Replacement
RETURN	BACK		
STOP	STOP		
PLAY	PLAY		
PAUSE/STILL	PAUSE		
- INDEX/SKIP	I<<-		
SEARCH	<<		
ARCH >>	>>		
SKIP/INDEX +	>>I		
SLOW	D		
CANCEL	CLEAR EXIT		
REPEAT A-B	REPEAT TEXT		
ZOOM	ECO 3D		
ANGLE	DISC NAV LIST		
PLAY MODE	SHIFT + PLAY MODE		
SUB TITLE	AD SUBT		
AUDIO	SOUND DUAL		

Original	Replacement	Original	Replacement

