



Original	Replacement	Original	Replacement
	Power		Power
	Night Mode		Rec
	Tuner Menu		Menu
	Dynamic Bass		List
	Sleep		Sleep
	Sound Field-		Ch -
	Sound Field+		Ch +
	Muting		Mute
	DVD Menu		D. Menu
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
>10 button icon"/>	>10		Guide
	Function		Smart
	Display		Info
	DVD Setup		Options
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Tv/Video		TV/R




 

 




 
Original                  Replacement                  Original                  Replacement

	Dimmer		Format		
	Pause		Pause		
	Play/Select		Play		
	Stop		Stop		
	<</Tuning-/<l		<<		
	Tuning+/Slow		>>		
	>> /Preset+		>>		
	<</Preset-		<<		
	Audio		Dual		
	Repeat		Text		
	DVD Display		Media		
	Enter		Pre Ch		
	DVD Top Menu		Shift + Menu		
	Band		3D		
	Angle		Green		
	Play Mode		Shift + Play		





	Original	Replacement		Original	Replacement
	Power Tv		Power		Vol +
	Tv/Video		TV/R		Vol -
	Muting		Mute		Tv CH+
	1		1		Tv CH-
	2		2		Display
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	10/0		0		
	>10		Guide		
	Function		Smart		
	Band		3D		
	Enter		Pre Ch		

	Original	Replacement		Original	Replacement
	Vol+		Vol +		
	Vol-		Vol -		
	Tv CH+		Ch +		
	Tv CH-		Ch -		
	Display		Info		

