


Original	Replacement
Open/Close	Eject / Surround
Power	Power
Stereo/Mono	Shift + Audio / Lang I/II
Name	Text / Goto
Dimmer	Shift + Mute / Dimmer
Repeat	Green / APP / Repeat
Tv/Video	AV / Input / RDS
Clear	Exit / Cancel / Clear
Memory	Rec / Rec Mode
Time	Sleep / Timer
Muting	Mute / Dimmer
Play Mode	Shift + Play /
1	1
2	2
3	3
Function	Smart / List
Audio	Audio / Lang I/II

Original	Replacement
4	4
5	5
6	6
Band	TV/Radio /
Angle	Info / Angle
7	7
8	8
9	9
Sound Field	Sound / Title
Subtitle	Subtitle / EQ
>10 button"/> >10	Guide / EPG / -/-
10/0	0
Enter	Fav / Marker / PC
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
I<</Preset-	I<< / Preset-

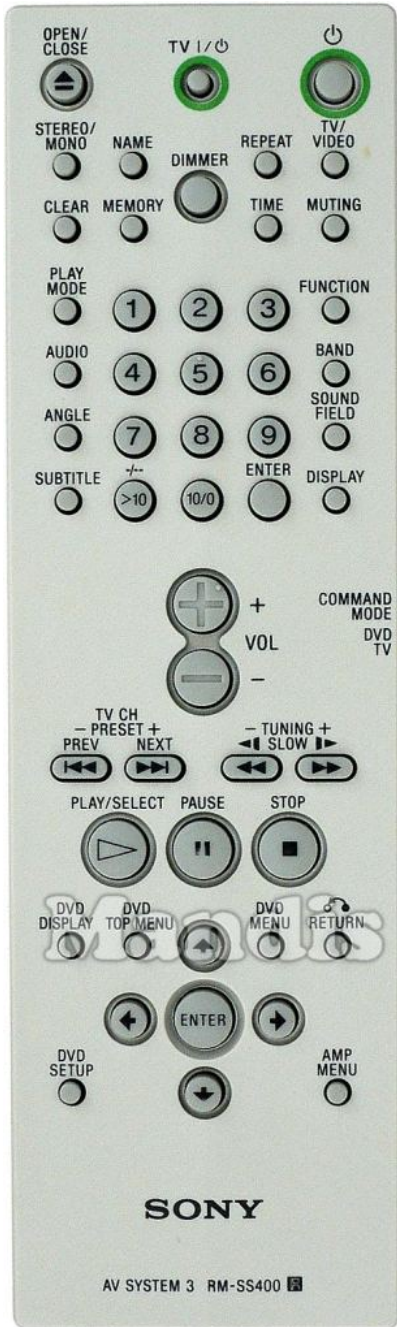



Original	Replacement
Power Tv	Power
Stereo/Mono	Audio / Lang I/II
Tv/Video	AV / Input / RDS
Memory	Rec / Rec Mode
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Smart / List
4	4
5	5
6	6
Band	TV/Radio /
7	7
8	8
9	9
Sound Field	Sound / Title

Original	Replacement
>10	Guide / EPG / -/--
10/0	0
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home

