 



 

 


 
 


 





 




Original		Replacement		Original		Replacement	
	Power		Power		3		3
	Tv/Radio		TV/R		4		4
	EPG/Mouse/IR		Guide		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	<</Size		<<		8		8
	>>/Subpage		>>		9		9
	Rec		Rec		0		0
	Stop		Stop		-/--	 + 	Shift + Guide
	I<</FAV		I<<		Recall		Back
	>>/Index		>>I		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Hold		Options		Mute		Mute
	Text		Text		CH/Page+		Ch +
	Subtitle		Subt		CH/Page-		Ch -
	1		1		Red		Red
	2		2		Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Menu		Menu				
	Display		Info				
	Exit		Exit				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Source		AV				
	Smart Tv		Smart				

