


 


 
 
 



 







 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	D/A		TV/R
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format
	Sound		Shift + Dual
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I / II		Dual
	Still		List
	Zoom		Eject
	Exit		Exit





Original	Replacement
Radio / Browse	Shift + TV/R
T.Shift / Rotate	Shift + AV
Audio / Page up	Shift + Ch +
Audio / Page up	Shift + Subt
Subtitle / Page down	Subt
Subtitle / Page down	Shift + Ch -
D/EMP	Smart
Media / PVR	Media
Play / Pause	Play
Play / Pause	Pause
Stop	Stop
Red / <<<	Red
Red / <<<	<<<
Green / >>>	Green
Green / >>>	>>>
Yellow / I<<<	Yellow
Yellow / I<<<	I<<<

Original	Replacement
Blue / >>>I	Blue
Blue / >>>I	>>>I
Text / Setup	Text
Size	Format
Reveal	Options
Cancel	Back
Hold / Sleep	Sleep
Index	Shift + Info
Sub.Code /	3D
Mix	Shift + Options

