



Original		Replacement		Original		Replacement	
	Power		Power		5		5
	i		Info		6		6
	Mute		Mute		7		7
	Av/TV		AV		8		8
	EPG		Guide		9		9
	M/Menu		Menu		0		0
	Back		Back		Vol+		Vol +
	Home		Smart		Vol-		Vol -
	OK		Ok		P+		Ch +
	Up		Up		P-		Ch -
	Down		Down		Red		Red
	Right		Right		Green		Green
	Left		Left		Yellow		Yellow
	1		1		Blue		Blue
	2		2		Rec		Rec
	3		3		Stop		Stop
	4		4		Play		Play



