



 
 

 













 







| Original  | Replacement   |
|---|---|
|  Mute        |  Mute / Dimmer       |
|  Power       |  Power               |
|  1           |  1                   |
|  2           |  2                   |
|  3           |  3                   |
|  4           |  4                   |
|  5           |  5                   |
|  6           |  6                   |
|  7           |  7                   |
|  8           |  8                   |
|  9           |  9                   |
|  EPG       |  Guide / EPG / -/- |
|  0         |  0                 |
|  List      |  Smart / List      |
|  Mode      |  D.Menu / Top      |
|  i         |  Info / Angle      |
|  TV/R Live |  TV/Radio /        |

| Original   | Replacement   |
|--|---|
|  Up     |  Up                    |
|  Left   |  Left                  |
|  OK     |  OK                    |
|  Right  |  Right                 |
|  Down   |  Down                  |
|  Exit   |  Exit / Cancel / Clear |
|  Recall |  Back / Return         |
|  Menu   |  Menu / Home           |
|  CH+    |  CH+ / Page+           |
|  Text   |  Text / Goto           |
|  Option |  Setup / OPT /         |
|  Vol+ |  Vol+                |
|  CH-  |  CH- / Page-         |
|  F1   |  Shift + 1           |
|  F2   |  Shift + 2           |
|  Vol- |  Vol-                |
|  Rec  |  Rec / Rec Mode      |



