

























































 













 





Original		Replacement		Original		Replacement	
	RDS ASPM		D.Menu / Top		9		9
	Direct		Info / Angle		0		0
	RDS PTY		Text / Goto		+10		Guide / EPG / -/-
	On Screen		Smart / List		Memory /		Mute / Dimmer
	RDS Display		Setup / OPT /		Zoom		Zoom / Size
	Clear / Display		Display / Media		Subtitle		Subtitle / EQ
	Clear / Display		Exit / Cancel / Clear		Menu		Menu / Home
	On / Stand By		Power		Up / Tuning+		Shift + Tune+ / >>
	1		1		Up / Tuning+		Up
	2		2		Return		Back / Return
	3		3		Left		Left
	Clock / Timer		Sleep / Timer		Enter		OK
	4		4		Right		Right
	5		5		>> / >> /		>> / Tune+
	6		6		I<<< / <<< / Preset-		I<<< / Preset-
	7		7		I<<< / <<< / Preset-		<<< / Tune-
	8		8		Down / Tuning-		Shift + Tune- / <<<

Tune-





Original	Replacement
 Down / Tuning-	 Down
 >> / >> /	 >> / Preset+
 USB Play/Pause	 Pause / Step / Freeze
 Slow	 Shift + Play /
 DVD/CD	 Play / Slow
 Stop	 Stop / Hold
 Still	 Shift + Pause / Step /
 DVD/CD	 Shift + 2
 DVD/CD	 Shift + 3
 DVD/CD	 Green / APP / Repeat
 USB	 Shift + 8
 USB	 Blue / Prime Video / Random
 AUX	 Shift + 7
 AUX	 Red / Netflix / Search
 TUNER	 Shift + 6
 TUNER	 Yellow / YouTube / Repeat
 Audio	 Audio / Lang I/II

Original	Replacement
 Dolby VS	 Sound / Title
 Volume-	 Vol-
 Volume+	 Vol+

