



Original	Replacement	Original	Replacement
	Power		Power
	Info		Info
	TV		TV/R
	AV		AV
	R		Pre Ch
	F1		List
	F2		Sleep
	F3		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Blue/Video		Blue
	Yellow/Sound		Yellow
	White		Options
	Green/Timer		Green
	Red/Recall		Red
	P+		Ch +
	Up		Up
	P-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Pause		Pause


 






 














Original		Replacement		Original	Replacement
	Exit		Exit		
	Text		Text		
	EPG		Guide		
	Menu		Menu		





Original	Replacement	Original	Replacement
Power		Power	
TV		TV/R	
AV		AV	
R		Dual	
F1		Shift + 1	
F2		Shift + 2	
F3		Shift + 3	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	

Original	Replacement	Original	Replacement
Blue		Blue	
Yellow		Yellow	
White		Smart	
Green		Green	
Red		Red	
Vol+		Vol +	
Vol-		Vol -	
P+		Ch +	
Up		Up	
Down		Down	
P-		Ch -	
Right		Right	
Left		Left	
OK		Ok	
Info		Info	
Pause		Pause	
Text		Text	





Original	Replacement	Original	Replacement
Mute			
Menu			

