




 




 




 





















 
 
 



















Original	Replacement	Original	Replacement
 Power Receiver	 Power	 3 Tuner	 Shift + 3
 DVD	 2	 HDMI Out	 AV / Input / RDS
 BD	 1	 4 Tuner	 Shift + 4
 DVR	 5	 Signal Sel	 Shift + Setup / OPT / Tools
 HDMI	 0	 MCACC	 Fav / Marker / PC
 TV	 TV/Radio /	 5 Tuner	 Shift + 5
 CD	 3	 6 Tuner	 Shift + 6
 CD-R	 9	 Sleep	 Sleep / Timer
 Home Media	 Shift + Menu /	 7 Tuner	 Shift + 7
 iPod / USB	 8	 SBch	 Eject / Surround
 Tuner	 6	 8 Tuner	 Shift + 8
 Video 1	 4	 A.ATT.	 Yellow / YouTube / Repeat
 Video 2	 7	 9 Tuner	 Shift + 9
 ↶ Input Select	 Shift + Left	 Dimmer	 Shift + Mute / Dimmer
 1 Tuner	 Shift + 1	 D.Access	 Shift + D.Menu / Top Menu
 Input Select ↷	 Shift + Right	 CH Level	 Shift + CH+ /
 2 Tuner	 Shift + 2	 0 Tuner	 Shift + 0





Original	Replacement
 Class	 Shift + Display / Media
 Enter (Class)	 Shift + OK
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top
 Band	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Tune+	 Shift + >> /
 Up	 Up
 Tools	 Setup / OPT /
 T.Edit	 Text / Goto
 Video	 Picture / Format
 Left	 Left
 Preset -	 Shift + << / Preset-
 Enter	 OK
 Preset +	 Shift + >> / Preset+

Original	Replacement
 Right	 Right
 iPod CTRL	 Smart / List
 Home Menu	 Menu / Home
 Tune-	 Shift + << /
 Down	 Down
 Return	 Back / Return
 Auto / Alc / Direct	 Info / Angle
 Stereo	 Sound / Title
 Repeat	 Green / APP / Repeat
 Standard	 Shift + Smart / List
 Random	 Blue / Prime Video / Random
 Adv. Surr.	 Guide / EPG / -/-
 <<	 << / Tune-
 Phase CTRL	 Red / Netflix / Search
 Play	 Play / Slow
 >>	 >> / Tune+
 Status	 Exit / Cancel / Clear





	Original	Replacement	Original	Replacement
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	MPX	Zoom / Size		
	PQLS	+ Shift + Info / Angle		
	Stop	Stop / Hold		
	>>I	>>I / Preset+		
	Audio DVD	+ Shift + Audio / Lang I/II		
	Disp	Display / Media		
	CH -	CH- / Page-		
	CH +	CH+ / Page+		





 
 














 


 


 
 
 



 

 



 



 
 
Original	Replacement
 Power Source	 Power
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Top Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 Enter	 Shift + OK
 Enter	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II





Original	Replacement
 Power Source	 Power
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 D.Access	 D.Menu / Top
 0	 0
 Class	 CH- / Page-
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer

Original	Replacement
 Band	 Smart / List
 Tune+	 >> / Tune+
 Tune+	 Up
 T.Edit	 Text / Goto
 Preset-	 Left
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Preset+	 Right
 Search	 Red / Netflix / Search
 Tune-	 << / Tune-
 Tune-	 Down
 Menu	 Menu / Home
 MPX	 CH+ / Page+
 Disp	 Display / Media

