












 

 





















| Original | Replacement |
|---------------|---------------------------|
| Standby / On | Power |
| Sleep | Sleep / Timer |
| INPUT PREV. | CH- / Page- |
| INPUT NEXT | CH+ / Page+ |
| NETWORK | Shift + 7 |
| iPod / USB | Shift + 8 |
| ADAPTER | Shift + 4 |
| BD | Shift + 9 |
| DVD | Shift + 2 |
| DVR / BDR | Shift + 5 |
| SAT / CBL | Shift + Fav / Marker / PC |
| GAME | Shift + Guide / EPG / -/- |
| HDMI | Shift + 0 |
| CD | Shift + 3 |
| TV | Shift + 1 |
| TUNER | Shift + 6 |
| Auto / Direct | Red / Netflix / Search |

| Original | Replacement |
|------------|-----------------------------|
| ALC / | Green / APP / Repeat |
| Adv. Surr. | Yellow / YouTube / Repeat |
| ECO | Blue / Prime Video / Random |
| Audio | Audio / Lang I/II |
| Up | Up |
| Tune+ | Shift + >> / |
| Tools Menu | Setup / OPT / |
| Volume+ | Vol+ |
| Left | Left |
| Preset - | Shift + I<< / Preset- |
| Enter | OK |
| Right | Right |
| Preset+ | Shift + >>I / Preset+ |
| Down | Down |
| Tune- | Shift + << / |
| Volume- | Vol- |
| Home Menu | Menu / Home |





| Original | Replacement |
|---|---|
|  iPod Ctrl. |  D.Menu / Top |
|  PTY |  Info / Angle |
|  Return |  Back / Return |
|  BAND |  TV/Radio / |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Mute |  Mute / Dimmer |
|  I<< |  I<< / Preset- |
|  BASS DOWN |  Shift + Down |
|  >>I |  >>I / Preset+ |
|  BASS UP |  Shift + Up |
|  << |  << / Tune- |
|  TREBLE DOWN |  Shift + Left |
|  >> |  >> / Tune+ |
|  TREBLE UP |  Shift + Right |
|  1 |  1 |

| Original | Replacement |
|---|---|
|  PHASE |  Subtitle / EQ |
|  2 |  2 |
|  3 |  3 |
|  Signal Sel. |  Guide / EPG / -/- |
|  DISP |  Display / Media |
|  4 |  4 |
|  Auto S.RTRV |  Sound / Title |
|  5 |  5 |
|  SB CH |  Eject / Surround |
|  6 |  6 |
|  CHANNEL |  Smart / List |
|  Repeat |  Shift + Green / APP / |
|  7 |  7 |
|  Midnight |  Picture / Format |
|  Speakers |  Zoom / Size |
|  8 |  8 |
|  9 |  9 |



