

 
 

 


 







 


 















 
 


 



 








 

 




 



 


 




Original	Replacement	Original	Replacement
On/Off	 Power	Menu Left	 Left
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Progr.	 Sleep
Slow Up	 Ch +	Next	 >>
Pause	 Pause	Menu Right	 Right
Auto/Track	 Smart	Prev.	  <<
Stop	 Stop	Menu Down	 Down
Subt.	 Subt	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Rep/A-B	 TV/R	Top Menu	 D. Menu
Pepeat/1/All	 Text	1	 1
Zoom	 Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	Store	 Red
Return	 Back	6	 6

 

 
 
 
 




 




 


Original	Replacement	Original	Replacement
Digest	 Green	Angle	 Format
7	 7	Np	 +  Shift + Subt
Open/Close	 Eject	Info	 +  Shift + Info
8	 8		
9	 9		
Clear/00:00	 Exit		
+10	 Guide		
Record	 Rec		
Auto Scan	 Media		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Setup	 Options		
Audio	 Dual		
3D	 3D		
0	 0		
C/CH	 Pre Ch		


 
 


 

 




 






 




 


 

 


 




Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Stop	 Stop	Return	 Exit
Pause	 Pause	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Slow Down	 Ch -	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 Sleep	Next	 >>I
Rep/A-B	 TV/R	Volume-	 Vol -
Zoom	 +  Shift + Eject	1	 1
Title	 List	2	 2
Pepeat/1/All	 Text	3	 3
DVD/TV	 AV	Prev.	 I<<
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
Video	 Smart		
9	 9		
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
Rewind	 <<		
Random	 Media		
Angle	 Format		
R/L	 +  Shift + Info		
Play	 Play		
Record	 Rec		
F.Forward	 >>		
3D	 3D		
Open/Close	 Eject		
Audio	 Dual		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Smart	Next	 >>
Stop	 Stop	Progr.	 Sleep
Subt.	 Subt	Volume+	 Vol +
Pause	 Pause	Top Menu	 D. Menu
Zoom	 +  Shift + Eject	Volume-	 Vol -
Title	 List	Prev.	  <<
Rep/A-B	 TV/R	1	 1
Pepeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Store	 +  Shift + Down
Open/Close	 Eject	Angle	 Format
Mode	 Media	Lang	 Dual
9	 9		
Setup	 Options		
+10	 Guide		
3D	 3D		
0	 0		
C/CH	 Pre Ch		
Play/Back	 +  Shift + Left		
Resume	 +  Shift + Play		
Play	 Play		
Karaoke/Step	 +  Shift + Pause		
Np	 +  Shift + Subt		
Record	 Rec		
F.Forward	 >>		
Rewind	 <<		

