



Original	Replacement	Original	Replacement
 Standby	 Shift + Power	 2	 2
 System Power	 Power	 HALL	 Audio / Lang I/II
 CD	 Shift + 3	 3	 3
 MD / CD-R	 Shift + 8	 Jazz	 Subtitle / EQ
 TUNER	 Shift + 6	 4	 4
 DVD	 Shift + 2	 Rock	 Eject / Surround
 DTV/CBL	 Shift + 1	 Music	 Picture / Format
 V-AUX	 Shift + 7	 5	 5
 Multi CH In	 Shift + 5	 Entertain	 Zoom / Size
 VCR 1	 Shift + 4	 6	 6
 DVR / VCR2	 Shift + 9	 7	 7
 Sleep	 Sleep / Timer	 TV Thtr	 TV/Radio /
 Volume+	 Vol+	 8	 D.Menu / Top
 Volume-	 Vol-	 8	 8
 Mute	 Mute / Dimmer	 Dolby DTS	 Setup / OPT /
 Stereo	 Sound / Title	 9	 9
 1	 1	 Night	 Text / Goto





	Original	Replacement		Original	Replacement
	0		0		Green / APP / Repeat
	EX/ES		AV / Input / RDS		Yellow / YouTube / Repeat
	Straight / Effect		<< / Tune-		Blue / Prime Video / Random
	Enter		Fav / Marker / PC		
	Level		Guide / EPG / -/--		
	Up		Up		
	Preset/CH-		CH- / Page-		
	Preset/CH-		<< / Preset-		
	Set Menu		Menu / Home		
	A/B/C/D/E		Smart / List		
	Left		Left		
	Select		OK		
	Right		Right		
	Preset/CH+		CH+ / Page+		
	Down		Down		
	Preset/CH+		>>  / Preset+		
	FREQ/RDS		Red / Netflix / Search		

	Original	Replacement
	PTY Seek Mode	Green / APP / Repeat
	PTY Seek Start	Yellow / YouTube / Repeat
	EON	Blue / Prime Video / Random

