









Original	Replacement	Original	Replacement
 Standby	 Shift + Power	 2	 2
 System Power	 Power	 HALL	 Audio / Lang I/II
 CD	 Shift + 3	 3	 3
 MD / CD-R	 Shift + 8	 Jazz	 Subtitle / EQ
 TUNER	 Shift + 6	 4	 4
 DVD	 Shift + 2	 Rock	 Eject / Surround
 DTV/CBL	 Shift + 1	 Music	 Picture / Format
 V-AUX	 Shift + 7	 5	 5
 Multi CH In	 Shift + 5	 Entertain	 Zoom / Size
 VCR 1	 Shift + 4	 6	 6
 DVR / VCR2	 Shift + 9	 7	 7
 Sleep	 Sleep / Timer	 TV Thtr	 TV/Radio /
 Volume+	 Vol+	 8	 D.Menu / Top
 Volume-	 Vol-	 8	 8
 Mute	 Mute / Dimmer	 Dolby DTS	 Setup / OPT /
 Stereo	 Sound / Title	 9	 9
 1	 1	 Night	 Text / Goto





Original	Replacement	Original	Replacement
 NIGHT	0	 HDMI - BAT	0
 EX/ES	EX/ES	 RDS AV INPUT	AV / Input / RDS
 STRAIGHT EFFECT	Straight / Effect	 TUNE-	<< / Tune-
 STRAIGHT ENTER EFFECT	Enter	 PC FAV MARKER	Fav / Marker / PC
 LEVEL TITLE	Level	 GUIDE EPG	Guide / EPG / -/-
 PRESET/CH	Up	 CH PAGE	Up
 PRESET/CH	Preset/CH-	 CH PAGE	CH- / Page-
 PRESET/CH	Preset/CH-	 PRESET-	I<< / Preset-
 SET MENU MENUL A/B/C/D/E	Set Menu	 HOME MENU	Menu / Home
 SET MENU MENUL A/B/C/D/E	A/B/C/D/E	 LIST SMART	Smart / List
 Left	Left	 Left	Left
 SELECT	Select	 OK	OK
 Right	Right	 Right	Right
 PRESET/CH+	Preset/CH+	 CH PAGE	CH+ / Page+
 DOWN	Down	 DOWN	Down
 PRESET/CH+	Preset/CH+	 PRESET+	>>I / Preset+
 FREQ/RDS	FREQ/RDS	 NETFLIX SEARCH	Red / Netflix / Search

Original	Replacement	Original	Replacement
 MODE - PTY S	PTY Seek Mode	 APP REPEAT	Green / APP / Repeat
 SEEK - START	PTY Seek Start	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 EON	EON	 Prime Video RANDOM	Blue / Prime Video / Random

