



 











 
 

 
 

 


 
















 


 


 

 

 
 
 











 





 





 

 
 

 
 
 
 

 
 
 
 

























	Original	Replacement	Original	Replacement
	Power			Mute
	Audio			Vol +
	[+]			Vol -
	Digital			Info
	Analog			Menu
	1			Exit
	2			Back
	3			Ch +
	4			Ch -
	5			Options
	6			Guide
	7			
	8			
	9			
	0			
	[≡]			
	Recall			



 















 


 
 


 

 
 









 

 
 




 

 


 
 


Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	F1		Smart
	F2		Media
	[ :≡ ]		Guide
	Display		Info
	Tools/Options		Options
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause























 
 


 
 


 
 




 






 

 


 
 



 


 


 


 
 
 


 
 
 




	Original	Replacement	Original	Replacement
	Power			Exit
	Menu			Info
	Top Menu			Options
	F1			Mute
	F2			Vol +
	[:=]			Vol -
	1			Back
	2			TV/R
	3			Up
	4			Down
	5			Right
	6			Left
	7			Ok
	8			Play
	9			Pause
	0			Stop
	Enter			>>







Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Source		AV		Mute		Mute
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Menu/Home		Media
	4		4		Return/Exit		Back
	5		5		Up		Up
	6		6		OK		Ok
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Play		Play
	Clear		Exit		Stop		Stop
	Enter		Pre Ch		Pause		Pause
	Theatre		Smart		>>/Tuning+		>>
	Sound Field		Dual		<</Tuning-		<<
	AMP Menu		Menu		>>I/Preset+		>>I





Original	Replacement	Original	Replacement
I<</Preset-	I<<		
→	Ch +		
←	Ch -		
DMPort	Options		
Video	Shift + 1		
BD	Shift + 3		
DVD	Shift + 4		
SAT	Shift + 5		
TV	Shift + 6		
Tuner/Band	Shift + 8		