










 




 






 







 





 
 
 



 

 

 
 







 











Original		Replacement		Original		Replacement	
	Power		Power		Up / CH+		Ch +
	Mute		Mute		Down / CH-		Down
	1		1		Down / CH-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		[≡i]		Info
	7		7		Mix		Shift + Text
	8		8		Brightness		Shift + 1
	9		9		Contrast		Shift + 2
	0		0		Color		Shift + 3
	AV		AV		Menu		Menu
	-/--		Guide		Red		Red
	TV TX		Text		Green		Green
	OK		Ok		Yellow		Yellow
	Up / CH+		Up		Blue		Blue





Original		Replacement		Original		Replacement	
	Stop		Stop				
	Reveal		Play				
	Update		Pause				
	Clock		Options				
	Sub		Subt				
	Double		Dual				
	Stereo A B		I<<				
	Stereo Sol		<<				
	Stereo Fa		>>				
	Stereo		>>I				
	Stereo PS		List				

