






| Original | Replacement |
|--|--|
|  Power |  Power |
|  TV / Radio |  TV/R |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  SAT |  AV |
|  Info |  Info |
|  EPG |  Guide |
|  Menu |  Menu |
|  P+ |  Shift + Ch + |

| Original | Replacement |
|---|--|
|  P- |  Shift + Ch - |
|  Exit |  Exit |
|  Up / CH+ |  Up |
|  Up / CH+ |  Ch + |
|  Down / CH- |  Down |
|  Down / CH- |  Ch - |
|  Right / Vol+ |  Right |
|  Right / Vol+ |  Vol + |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol - |
|  OK |  Ok |
|  FAV |  Pre Ch |
|  Audio |  Dual |
|  Mute |  Mute |
|  Red / ← |  Red |
|  Red / ← |  Back |
|  Black / MOT |  Blue |





| | Original | Replacement | Original | Replacement |
|---|-----------------------|--|----------|-----------------|
|  | LOCK Green / Lock |  B | | |
|  | LANG Yellow / Lang |  C | | |
|  | LANG Yellow / Lang |  SHIFT +  SOUND DUAL | | Shift + Dual |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

