



Original	Replacement
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual












 















 

 





 









 
Original	Replacement
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Replacement
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Left	 Left
 Right	 Right
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+ Stereo	 Vol +
 Vol- Stereo	 Vol -
 Stereo	 Dual

Original	Replacement
 Cable/Sat	 Green
 CD	 Yellow
 TV	 Blue
 Mute	 Mute

 




Original	Replacement	Original	Replacement
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/SAT	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+ Stereo	Vol +
Down	Down	Vol- Stereo	Vol -
Right	Right	CH/Tuner Down	Ch +
Left	Left	CH/Tuner Up	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original		Replacement		Original	Replacement
	Sleep		Sleep		
	DIM		TV/R		
	P.Scan		Text		
	A.Preset		AV		
	MEM		Format		
	RDS		Subt		
	Prev.CH		Pre Ch		
	I<		I<<		
	<<		<<		
	>>		>>		
	>I		>>I		
	Stop		Stop		
	Play		Play		
	Pause		Pause		

