




 

 
















 






















 

 


 




 














Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Position	 Red / Netflix / Search
 Group	 Green / APP / Repeat
 Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 Disc	 Rec / Rec Mode
 4	 4
 5	 5
 6	 6
 >=10 / -/--	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 DD Pro Logic	 Smart / List
 CH Select	 Fav / Marker / PC
 Test	 Text / Goto
 Super SRND	 Eject / Surround
 Top Menu / Direct Navigator	 D.Menu / Top
 EQ	 Shift + Subtitle / EQ
 Up	 Up
 Menu/Playlist	 Menu / Home
 Super Surround	 Sound / Title
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Super 3D AI EQ	 Picture / Format
 Down	 Down
 AV Effect	 AV / Input / RDS





Original		Replacement		Original		Replacement	
	Return		Back / Return		Skip >>I		>>I / Preset+
	VCR (Ext) / VDP (Aux)		Shift + 4		Volume-		Vol-
	TAPE / Deck 1/2		Shift + 5		Volume+		Vol+
	DVD		Shift + 2				
	TUNER / BAND		Shift + 6				
	Play Mode		Shift + Play /				
	Cancel		Exit / Cancel / Clear				
	Rev. Play / Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Audio		Audio / Lang I/II				
	Mix 2CH		TV/Radio /				
	Digital S.Woofler		Yellow / YouTube / Repeat				
	<< Slow/Search		<< / Tune-				
	Slow/Search >>		>> / Tune+				
	Muting		Mute / Dimmer				
	I<< Skip		I<< / Preset-				

