


 







 

 





 

 


 
 











| Original   | Replacement   |
|--|---|
|  VHS/DVD Power            |  Power   |
|  Direct TV Rec            |  Subt    |
|  VHS/DVD                  |  Smart   |
|  1                        |  1       |
|  2                        |  2       |
|  3                        |  3       |
|  4                        |  4       |
|  5                        |  5       |
|  6                        |  6       |
|  7                       |  7      |
|  8                      |  8     |
|  9                      |  9     |
|  0                      |  0     |
|  Cancel / Reset         |  Exit  |
|  Input Select           |  Guide |
|  CH+ / Tracking/V-Lock+ |  Ch +  |
|  CH- / Tracking/V-Lock- |  Ch -  |




| Original  | Replacement   |
|---|---|
|  Create Chapter              |  TV/R    |
|  I<< Skip                    |  I<<     |
|  Skip >>I                    |  >>I     |
|  REW / << Slow/Search        |  <<      |
|  FF / Slow/Search            |  >>      |
|  Stop                        |  Stop    |
|  Pause                       |  Pause   |
|  Play                        |  Play    |
|  Direct Navigator / Top Menu |  D. Menu |
|  Functions                  |  List   |
|  Up                        |  Up    |
|  Left                      |  Left  |
|  Enter                     |  Ok    |
|  Right                     |  Right |
|  Down                      |  Down  |
|  Sub Menu                  |  Menu  |
|  Return                    |  Back  |





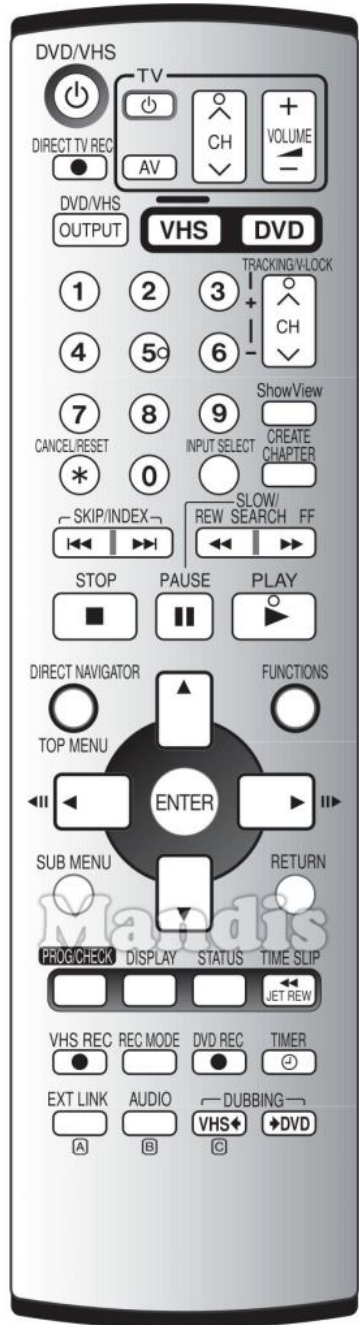



| Original  |                        | Replacement   |       | Original  |            | Replacement   |            |
|---|------------------------|---|-------|---|------------|---|------------|
|    | VHS/DVD Power          |    | Power |    | ShowView   |    | Media      |
|    | Direct TV Rec          |    | Subt  |    | I<< Index  |    | I<<        |
|    | VHS/DVD                |    | Smart |    | Index >>I  |    | >>I        |
|    | 1                      |    | 1     |    | REW        |    | <<         |
|    | 2                      |    | 2     |    | FF         |    | >>         |
|    | 3                      |    | 3     |    | Stop       |    | Stop       |
|    | 4                      |    | 4     |    | Pause      |    | Pause      |
|    | 5                      |    | 5     |    | Play       |    | Play       |
|    | 6                      |    | 6     |    | Up         |    | Up         |
|   | 7                      |   | 7     |   | Left       |   | Left       |
|  | 8                      |  | 8     |  | Enter      |  | Ok         |
|  | 9                      |  | 9     |  | Right      |  | Right      |
|  | 0                      |  | 0     |  | Down       |  | Down       |
|  | Cancel / Reset         |  | Exit  |  | Return     |  | Back       |
|  | Input Select           |  | AV    |  | Prog/Check |  | Sleep      |
|  | CH+ / Tracking/V-Lock+ |  | Ch +  |  | Display    |  | Info       |
|  | CH- / Tracking/V-Lock- |  | Ch -  |  | Jet Rew    |  | Shift + << |



