


 
 
 


 



 

 

 



 
 
 
 

 



 
 
 

 





 


 


 
 

 


 
 

 

 




 
 







| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  On/Standby |  Power |  Sleep |  Sleep |
|  CD |  Red |  Clock |  Smart |
|  Video/AUX |  Green |  Clear |  Exit |
|  Tuner |  Yellow |  Timer |  AV |
|  Band |  Blue |  Random/Repeat |  Text |
|  Play |  Play |  Memory |  Menu |
|  Pause |  Pause |  Dimmer |  Media |
|  Stop |  Stop |  Surround |  Dual |
|  >> |  >> |  Bass Up |  Ch + |
|  << |  << |  Bass Down |  Ch - |
|  Vol+ |  + Vol + |  Treble Down |  Left |
|  Vol- |  - Vol - |  Treble Up |  Right |
|  Preset Up |  Up |  Display |  Info |
|  Preset Down |  Down |  EON |  Subt |
|  >>/Tuner Up |  >> |  PTY-TI |  TV/R |
|  <</Tuner Down |  << |  ASPM |  3D |
|  Open/Close |  Eject | | |

