
 
 

 


 

 


 



 
 
 


 

 



 
 






 
 

 


 

 


 



 
 
 


 

 



 
 







Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Surround	 +  Shift + Red
9	 9	Nicam/Mono	 +  Shift + Green
Guide -/-- 1.	 Guide	Level L	 +  Shift + Yellow
0/10	 0	Level R/Woofer	 +  Shift + Blue
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Audio+	 +  Shift + Pause		
Tone-	 <<		
Tone+	 >>		
On/Tim	 +  Shift + Subt		
Game Coo	 +  Shift + Eject		
Disp	 +  Shift + Info		
Browse	 +  Shift + Back		
3.*	 +  Shift + Guide		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Color+ P.Std	 +  Shift + Format
9	 9	Game Coo	 +  Shift + Eject
Guide -/-- 1.	 GUIDE	Bright+ Mode	 +  Shift + Menu
0/10	 0	Search	 +  Shift + Up
2.Fav P/C 2.	 PRE-CH	Disp	 +  Shift + Info
Red	 A	Tune-	 +  Shift + Left
Green	 B	Tune+	 +  Shift + Right
Yellow	 C	Store	 +  Shift + Down
Blue	 D	Browse	 +  Shift + Back
Rotate Text	 +  Shift + Mute	Contrast+	 >>I
Audio+	 +  Shift + Pause	Color- S.Std	 +  Shift + Dual
Tone-	 <<	Contrast-	 I<<
Tone+	 >>	3.*	 +  Shift + Guide
On/Tim	 SMART	4.# 16:9	 Format
Off/Tim	 MEDIA	Surround	 +  Shift + Red
Mix Scan	 +  Shift + TV/R	Nicam/Mono	 +  Shift + Green
Store Text	 +  Shift + Text	Level L	 +  Shift + Yellow



