
 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Off Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up
 Tv/AV	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [=]/Text	 Text / Goto

Original	Replacement
 [=◆]/F.P.	 Smart / List
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 C	 Back / Return
 0/VCR	 0
 0/VCR	 Shift + 4
 i	 Info / Angle
 CH+	 CH+ / Page+





Original	Replacement	Original	Replacement
 Vol+	 Vol+		
 CH-	 CH- / Page-		
 Vol-	 Vol-		
 [+]/Aspect	 Picture / Format		
 N	 D.Menu / Top		
 Power VCR	 Shift + Power		
 Rec VCR	 Rec / Rec Mode		
 Programme Down	 Shift + CH- /		
 Programme Up	 Shift + CH+ /		
 << VCR	 << / Tune-		
 >> VCR	 >> / Tune+		
 Stop VCR	 Stop / Hold		
 Pause/Step VCR	 Pause / Step / Freeze		
 Play VCR	 Play / Slow		





Original	Replacement
Power DVD	Power
Rec DVD	Rec / Rec Mode
Programme Down	CH- / Page-
Programme Up	CH+ / Page+
I<< DVD	I<< / Preset-
>>I DVD	>>I / Preset+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze
Play DVD	Play / Slow

Original	Replacement

