



























Original	Replacement	Original	Replacement
 Standby	 Power	 Audio	 Audio / Lang I/II
 DTV/VCR	 AV / Input / RDS	 0	 0
 EPG	 Guide / EPG / /--	 Game	 Display / Media
 Favorite	 Fav / Marker / PC	 Text	 Text / Goto
 Info	 Info / Angle	 TV/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Play	 Play / Slow
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Stop	 Stop / Hold
 3	 3	 Zoom	 Zoom / Size
 USB	 Shift + 8	 Prev	 I<< / Preset-
 4	 4	 Next	 >>I / Preset+
 5	 5	 Rev	 << / Tune-
 6	 6	 Fwd	 >> / Tune+
 Sub-T	 Subtitle / EQ	 Menu	 Menu / Home
 7	 7	 Up / CH+	 Up
 8	 8	 Up / CH+	 CH+ / Page+
 9	 9	 Exit/Recall	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 Exit/Recall	 Back / Return		
 Left / Vol-	 Left		
 Left / Vol-	 Vol-		
 OK	 OK		
 Right / Vol+	 Vol+		
 Right / Vol+	 Right		
 Down / CH-	 CH- / Page-		
 Down / CH-	 Down		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

