





 

 
 
 
 





 
 
 




 


 













 
 
 
 
 
 


 





 






 
 
 







 


 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	Guide		Guide
	Mute		Mute
	CH List		List
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Content		TV/R
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		Ok
	Red		Red
	Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Alarm		Media		
	3D		3D		
	Subt.		Subt		
	Stop		Stop		
	<<		<<		
	I<<		I<<		
	Play		Play		
	Pause		Pause		
	>>		>>		
	>>I		>>I		

