
 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡0]	 << / Tune-
 >> / [≡?]	 >> / Tune+
  << / [≡+]	  << / Preset-
 >>  / [≡..]	 >>  / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Display / Media
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze

Original	Replacement
 Info	 Info / Angle
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1





Original		Replacement		Original		Replacement	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
RECALL	Recall	RETURN BACK	Back / Return				

