



Original	Replacement	Original	Replacement
 Standby	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Timer Prog	 Sleep
 Input Select	 AV	 Variable Replay	 Pre Ch
 HDMI	 TV/R	 Variable Skip	 Shift + Pre Ch
 1	 1	 Top Menu	 Menu
 2	 2	 Disc Menu	 D. Menu
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Display	 Info
 9	 9	 Return	 Shift + Back
 0	 0	 Mode	 Yellow
 Setup	 Options	 Search	 Blue
 Clear	 Exit	 <<	 <<
 Prog+	 Ch +	 Play	 Play





Original	Replacement
 >>	 >>
 I<<	 I<<
 Stop	 Stop
 >>I	 >>I
 Pause	 Pause
 VCR	 +  Shift + 1
 HDD	 +  Shift + 2
 DVD	 +  Shift + 3
 Time Slip	 +  Shift + Sleep
 Dubbing	 Back
 Rec Mode	 +  Shift + Rec
 Rec	 Rec
 Subtitle	 Subt
 1.3x/0.8x PPlay	 Format
 Audio	 Dual
 Sat Link	 3D

Original	Replacement

