



Original		Replacement		Original		Replacement	
	Standby		Power		Prog-		Ch -
	Open/Close		Eject		Timer Prog		Sleep
	Input Select		AV		Variable Replay		Pre Ch
	HDMI		TV/R		Variable Skip		Shift + Pre Ch
	1		1		Top Menu		Menu
	2		2		Disc Menu		D. Menu
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Display		Info
	9		9		Return		Shift + Back
	0		0		Mode		Yellow
	Setup		Options		Search		Blue
	Clear		Exit		<<		<<
	Prog+		Ch +		Play		Play





Original	Replacement	Original	Replacement
FWD	>>	FWD	>>
SKIP	<<	SKIP	<<
STOP	Stop	STOP	Stop
SKIP	>>	SKIP	>>
PAUSE	Pause	PAUSE	Pause
VCR	SHIFT + 1	VCR	Shift + 1
HDD	SHIFT + 2	HDD	Shift + 2
DVD	SHIFT + 3	DVD	Shift + 3
TIME SLIP	SHIFT + PROG SLEEP	TIME SLIP	Shift + Sleep
DUBBING	RETURN BACK	DUBBING	Back
REC MODE	SHIFT + REC MODE	REC MODE	Shift + Rec
REC	REC MODE	REC	Rec
SUBTITLE	AD SUBT	SUBTITLE	Subt
1.3x/0.8x PPlay	PICTURE FORMAT	1.3x/0.8x PPlay	Format
AUDIO	SOUND DUAL	AUDIO	Dual
SAT LINK	ECO 3D	SAT LINK	3D

Original	Replacement	Original	Replacement

