






 




 











 
 












 

 
 









Original	Replacement	Original	Replacement
	Power		Power
	Audio Monitor		Dual
	Format		Format
	Eject		Eject
	[i+]		Info
	Counter / Remain		Media
	Clear		Exit
	TV / Video		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Input Select		AV
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Slow		Shift + <<
	x2		Shift + >>
	I<<		I<<
	>>I		>>I
	Rec		Rec
	SP / LP		Smart
	Menu		Menu
	Timer		Shift + AV
	Up		Up
	Pause		Pause











 


 










 


 

 



















 



 


Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			







Original	Replacement
 Power	 Power
 Display	 Info
 Format	 Format
 Audio Monitor	 Dual
 TV / Video	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 REPEAT TEXT
 [ ]	 SEARCH TV/R

Original	Replacement
 -/--	 GUIDE
 Vol+	 + VOL
 Vol-	 VOL -
 Prog+	 + CH
 Prog-	 CH -
 SLOW	 A
 x2	 B
 x2	 C
 x2	 D

