
















Original	Replacement
 Power Off	 Shift + Power
 Power	 Power
 DVD	 2
 VDP	 Shift + 2
 Tuner	 6
 Shift	 Smart / List
 TV/DBS	 1
 Phono	 9
 Channel+	 CH+ / Page+
 VCR-1	 4
 CD	 3
 MD/Tape	 5
 Channel-	 CH- / Page-
 VCR-2/V-AUX	 7
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold

Original	Replacement
 Play	 Play / Slow
 I<</Volume-	 I<< / Preset-
 >>I/Volume+	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 </Disc Skip+	 Rec / Rec Mode
 Speaker	 AV / Input / RDS
 Dolby/DTS	 Zoom / Size
 Direct	 Audio / Lang I/II
 Master Vol+	 Vol+
 DSP Simulation	 Picture / Format
 5CH Stereo	 Subtitle / EQ
 Stereo	 Sound / Title
 Master Vol-	 Vol-
 Input Mode	 Red / Netflix / Search
 Input Analog	 Green / APP / Repeat
 Ext. In	 Yellow / YouTube / Repeat
 Muting	 Mute / Dimmer





Original	Replacement
 Tuning Down	 Shift + << /
 Tuning Up	 Shift + >> /
 System Setup	 Setup / OPT /
 Up	 Up
 Surround	 Eject / Surround
 Band	 Shift + Stop /
 Enter	 OK
 CH Select	 Menu / Home
 Mode Tuner	 Shift + Play /
 Left	 Left
 Right	 Right
 Memory	 Shift + Pause / Step /
 Status	 Display / Media
 Down	 Down
 On Screen	 Info / Angle
 T.Tone	 Text / Goto
 Multi EQ	 Guide / EPG / -/--

Original	Replacement
 Output	 Fav / Marker / PC

