




 

 

 



 
 

 

 
 
 


 

 


 



 

 
 


 
 


 
 
 

Original	Replacement
 Power	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Nicam / A2	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall	 Pre Ch
 FAV	 Shift + Pre Ch
 Fav +	 Shift + Up
 Fav -	 Shift + Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit





Original		Replacement	
	Vol +		Vol +
	Vol -		Vol -
	Media		Media
	TV / Radio		TV/R
	CH +		Ch +
	CH -		Ch -
	Play/Pause / Text		Play
	Play/Pause / Text		Pause
	Play/Pause / Text		Text
	<< / Size		<<
	<< / Size		3D
	>> / Reveal		>>
	Stop / Hold		Stop
	I<< / Index		I<<
	>>I / Subpage		>>I
	Cancel		Shift + Exit
	Subtitle		Subt

Original		Replacement	
	Rec		Shift + Text
	Timeshift		Smart
	A-B		Back
	EPG		Format

