

 


 


 


 
 










 






 





 
 







 

 
 


 



 

 

 






 





Original	Replacement	Original	Replacement
	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Search		Shift + TV/R
	Show View		Smart
	OSD/Display		Info
	Replay		Pre Ch
	Direct Tv Rec		TV/R
	I<< Index		I<<
	Index >>I		>>I
	Rec		Rec
	Pause/Step		Pause
	Menu		Menu
	OK		Ok
	Play/Up		Play
	Stop/Down		Stop
	>>/Right		>>
	<</Left		<<
	SP/LP		Format









 


 

 










Original		Replacement		Original		Replacement	
	Timer Rec		3D		Exit		Exit
	Prog/Check		Sleep				
	Reset		Back				
	Audio		Dual				
	VPS/PDC		Subt				
	AV Link		Media				
	TV Aspect		Eject				
	Still Album		List				
	Up		Up				
	Down		Down				
	Date+		Right				
	Date-		Left				
	On+		Red				
	On-		Green				
	Off+		Yellow				
	Off-		Blue				
	Cancel		D. Menu				







Original	Replacement
	
Power	Power
	
TV/Text	Text
	
CH+	Ch +
	
CH-	Ch -
	
Vol+	Vol +
	
Vol-	Vol -
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
-/--	Guide

Original	Replacement
	
AV Input Select	AV
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue

