






































 




























 

Original	Replacement
 Power	 Power
 DTV/ATV	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Still	 Shift + Pause / Step /
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 i	 Info / Angle
 P+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 P-	 CH- / Page-
 Sleep	 Sleep / Timer
 Vol-	 Vol-
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Aspect	 Shift + Picture / Format
 Audio	 Audio / Lang I/II
 Red	 Red / Netflix / Search





Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	<< / Tune-
	Text / Goto
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Zoom / Size
	Stop / Hold
	D.Menu / Top
	Subtitle / EQ
	TV/Radio /
	Shift + Green / APP /
	Smart / List

Original	Replacement
	Fav / Marker / PC
	Guide / EPG / -/-
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Display / Media
	Eject / Surround

