






 



 
 




 

 
 

 






 







 



 



 





 







 
 

 









Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Marker	 Smart	 9	 9
 Open/Close	 Eject	 0	 0
 Search	 TV/R	 I<<	 I<<
 Audio	 Dual	 Play	 Play
 Subtitle	 Subt	 >>I	 >>I
 Angle	 Red	 Zoom	 Shift + Eject
 Random	 Media	 Stop	 Stop
 Program	 Sleep	 Pause/Step	 Pause
 Clear	 Exit	 Display	 Info
 1	 1	 <I Slow	 <<
 2	 2	 Slow I>	 >>
 3	 3	 Select/Enter	 Ok
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left





Original		Replacement		Original		Replacement	
	Menu		Menu				
	Title		List				
	Setup		Options				
	Return		Back				
	Repeat		Text				
	A-B		Format				

