


 












 
 









 






















Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Sound / Title
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Sleep / Timer
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Info / Angle
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Recall		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Ratio		Shift + Picture / Format
	TV		Shift + 1

Original	Replacement

