








































 






























Original		Replacement		Original		Replacement	
	Power		Power		7		7
	[i+]/Timer		Info / Angle		8		8
	[i+]/Timer		Sleep / Timer		9		9
	Input 1		Shift + 1		CH Return		Guide / EPG / -/--
	Input 2		Shift + 2		0		0
	Input 3		Shift + 3		CH Enter		Fav / Marker / PC
	Input 4		Shift + 4		P+		CH+ / Page+
	PC		Shift + Fav / Marker / PC		I-II		Audio / Lang I/II
	Screen Split		Shift + Red / Netflix /		Vol+		Vol+
	Screen Swap		Shift + Green / APP /		P-		CH- / Page-
	PIP Swap		Shift + Yellow / YouTube /		Mute		Mute / Dimmer
	1		1		Vol-		Vol-
	2		2		Return		Back / Return
	3		3		Up		Up
	4		4		Home Menu		Menu / Home
	5		5		Left		Left
	6		6		Enter		OK





Original		Replacement		Original		Replacement	
	Right		Right				
	Down		Down				
	AV Selection		AV / Input / RDS				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	[ I+ ]/[ ≡ ♦ ]		Setup / OPT /				
	[ <> ]		Picture / Format				
	[ ... ]		Subtitle / EQ				
	[ ≡ ? ]		D.Menu / Top				
	[ ≡ i ]		Display / Media				
	[ ≡ ]		Text / Goto				

