






 

 
 
 
 
 



 

 



 

 

 

 








Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Radio	 TV/R
 Time Shift	 3D
 Sleep	 Sleep
 Rec	 Rec
 Fav	 Shift + Pre Ch

Original	Replacement
 Mouse	 Shift + Media
 www	 Media
 Back	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Smart TV	 Smart
 Home	 Shift + Smart
 Refresh	 D. Menu
 CH+	 Ch +
 CH-	 Ch -
 Red / <<	 Red
 Red / <<	 <<





Original	Replacement
Green / >>	Green
Green / >>	>>
Yellow / I<<	Yellow
Yellow / I<<	I<<
Blue / >>I	Blue
Blue / >>I	>>I
Text / Play/Pause	Text
Text / Play/Pause	Play
Text / Play/Pause	Pause
Stop / Cancel	Stop
Reveal	Shift + Text
Size	Eject
PVR List / Index	Shift + List
Subtitle	Subt
S.Mode	Dual
List	List
P.Mode	Format

Original	Replacement
Info	Info
Options	Options
Menu	Menu
Pre-CH	Pre Ch
Audio	Shift + Dual
EPG	Guide
Source	AV
Exit	Exit

