



 



 
 


 
 

 
 

 





 
 


 




 


 



 
 






 
 
 


 


 






 








Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow
 Input	 AV	 Blue	 Blue
 1	 1	 [=]	 Menu
 2	 2	 Pause	 Pause
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Back	 Back
 9	 9	 Exit	 Exit
 0	 0	 Vol+	 Vol +
 Guide	 Guide	 Vol-	 Vol -
 CH.List	 List	 Home	 Smart
 Play	 Play	 Micro	 Media
 Red	 Red	 CH+	 Ch +
 Green	 Green	 CH-	 Ch -



