






 





 





 



 



 



 



 



 



 



 



 



 







 








Original	Replacement	Original	Replacement
 Power	 Power	 Left / Vol-	 Vol -
 Picture Size	 Eject	 OK	 Ok
 Picture Mode	 Format	 Menu	 Menu
 Sound Select	 Dual	 Source	 AV
 PIP On	 Smart	 1	 1
 PIP Size	 Shift + Eject	 2	 2
 PIP CH+	 Shift + Ch +	 3	 3
 PIP CH-	 Shift + Ch -	 4	 4
 PIP Source	 Shift + AV	 5	 5
 PIP Swap	 Shift + Back	 6	 6
 Up / CH+	 Up	 7	 7
 Up / CH+	 Ch +	 8	 8
 Down / CH-	 Down	 9	 9
 Down / CH-	 Ch -	 0	 0
 Right / Vol+	 Right	 Still	 Pause
 Right / Vol+	 Vol +	 Prev CH	 Back
 Left / Vol-	 Left	 Mute	 Mute



