






 

 




 

 
 
 
 

 



 
 
 
 
 
| Original | Replacement |
|--|---|
|  On |  Power |
|  Off |  +  Shift + Power |
|  Mute |  Mute |
|  AVR |  +  Shift + 1 |
|  DVD |  +  Shift + 2 |
|  CD |  +  Shift + 3 |
|  Tape |  +  Shift + 4 |
|  VID1/VCR |  +  Shift + 5 |
|  VID2/TV |  +  Shift + 6 |
|  VID3/CBL/SAT |  +  Shift + 7 |
|  DIM |  +  Shift + 8 |
|  AM/FM |  +  Shift + 9 |
|  6 CH |  +  Shift + Guide |
|  Sleep |  Sleep |
|  Test |  Smart |
|  Input |  AV |
|  Vol+ |  Vol + |

| Original | Replacement |
|--|---|
|  Surr. |  Dual |
|  Night |  Exit |
|  [≡] |  Text |
|  Vol- |  Vol - |
|  CH./[≡?] |  TV/R |
|  Up |  Up |
|  SPKR/Menu |  Menu |
|  Left |  Left |
|  Set |  Ok |
|  Right |  Right |
|  Digital/[≡X] |  Media |
|  Down |  Down |
|  Delay/Normal |  Info |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |





 



 



 

 




 
 

 




 


 
 

 
 
 

 
 
 
 

 

 
 

 








 




 
 



 
 

 


| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  5 |  5 |  Dolby |  Shift + Red |
|  6 |  6 |  DTS Surr. |  Shift + Green |
|  7 |  7 |  DTS Neo 6 |  Shift + Yellow |
|  8 |  8 |  Logic 7 |  Shift + Pre Ch |
|  Tun-M/[\equiv +] |  Guide |  Stereo |  Shift + Blue |
|  9 |  9 |  Skip Dwn DVD |  I<< |
|  0 |  0 |  Skip Up DVD |  >>I |
|  Mem/[\equiv ♦] |  Pre Ch |  << DVD |  << |
|  Tuning ▲ / Red |  Ch + |  Play DVD |  Play |
|  Tuning ▲ / Red |  Red |  >> DVD |  >> |
|  Direct/Green |  Green |  Stop DVD |  Stop |
|  Clear/Yellow |  Yellow |  Pause DVD |  Pause |
|  Preset ▲ / Blue |  Shift + Ch + | | |
|  Preset ▲ / Blue |  Blue | | |
|  Tuning ▼ |  Ch - | | |
|  RDS/D.Skip |  Options | | |
|  Preset ▼ |  Shift + Ch - | | |

| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  Dolby |  Shift + Red |  DTS Surr. |  Shift + Green |
|  DTS Neo 6 |  Shift + Yellow |  Logic 7 |  Shift + Pre Ch |
|  Stereo |  Shift + Blue |  Skip Dwn DVD |  I<< |
|  Skip Up DVD |  >>I |  << DVD |  << |
|  << DVD |  Play |  >> DVD |  >> |
|  Play DVD | |  Stop DVD |  Stop |
|  >> DVD | |  Pause DVD |  Pause |
|  Stop DVD | | | |
|  Pause DVD | | | |





| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|---------------|---|------------|---|--------------|
|  | Power On |  | Power |  | 3 |  | 3 |
|  | Power Off |  | Shift + Power |  | 4 |  | 4 |
|  | Vol+ |  | Vol + |  | 5 |  | 5 |
|  | Night |  | Exit |  | 6 |  | 6 |
|  | [=] |  | Text |  | 7 |  | 7 |
|  | Vol- |  | Vol - |  | 8 |  | 8 |
|  | CH./[=?] |  | TV/R |  | Tun-M/[≡+] |  | Guide |
|  | Up |  | Up |  | 9 |  | 9 |
|  | SPKR/Menu |  | Menu |  | 0 |  | 0 |
|  | Left |  | Left |  | Mem/[≡◇] |  | Pre Ch |
|  | Set |  | Ok |  | Direct |  | Smart |
|  | Right |  | Right |  | Clear |  | Shift + Exit |
|  | Digital/[≡X] |  | Media |  | Preset ▲ |  | Ch + |
|  | Down |  | Down |  | RDS/D.Skip |  | Options |
|  | Delay/Normal |  | Info |  | Preset ▼ |  | Ch - |
|  | 1 |  | 1 |  | I<< |  | I<< |
|  | 2 |  | 2 |  | >>I |  | >>I |



